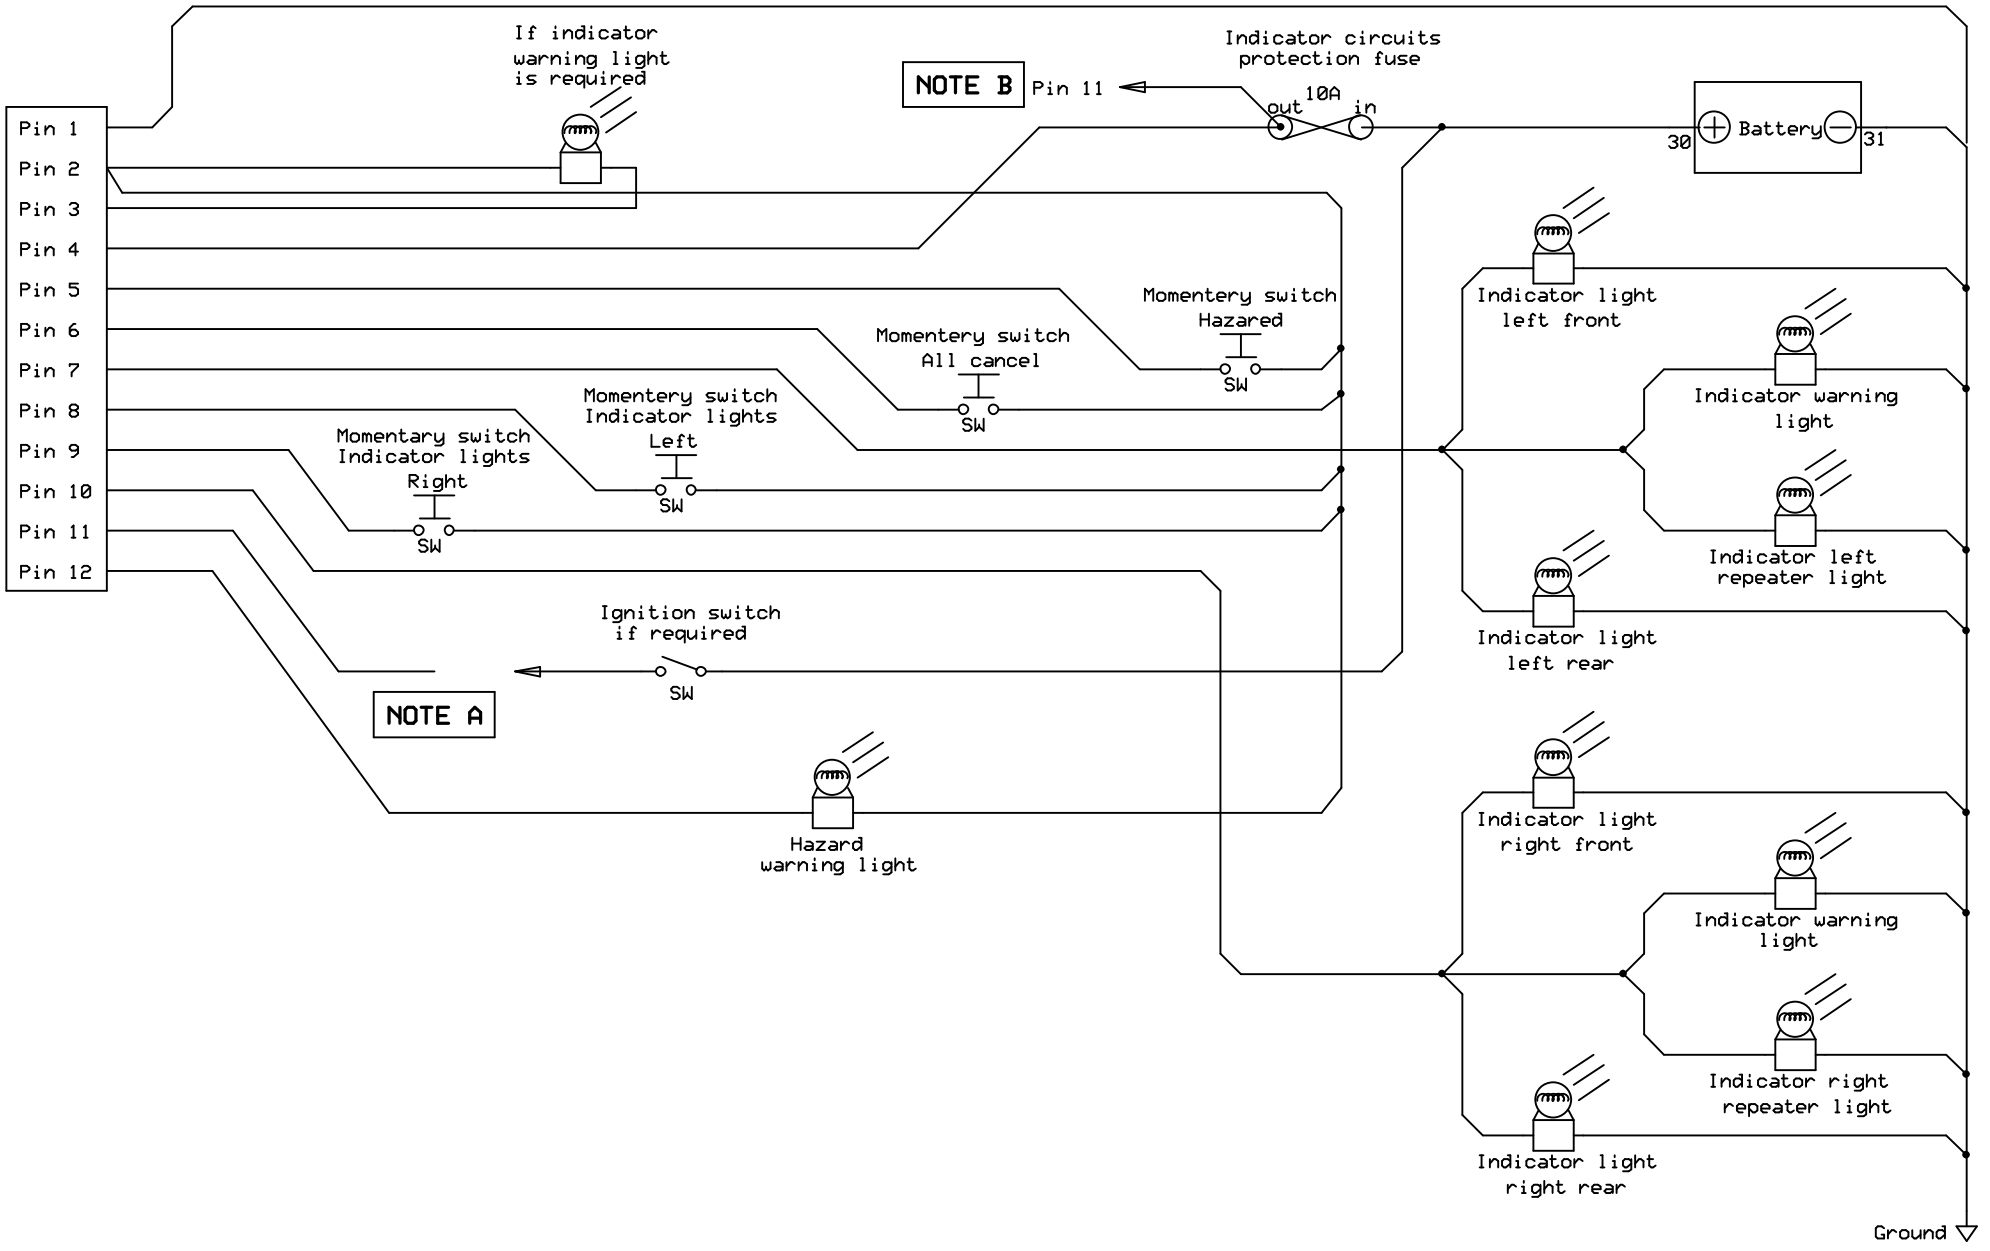

NOTE A If it is required that indicators only work with ignition on connect hear

NOTE B If not then connect this wire to output of indicator protection fuse

Simtek UK		
Indicator Controller		
Jay Simkins	Rev 1.0 12/10/2009	Page 1