



Crimping 6.3mm Connector Terminals with TOL-001

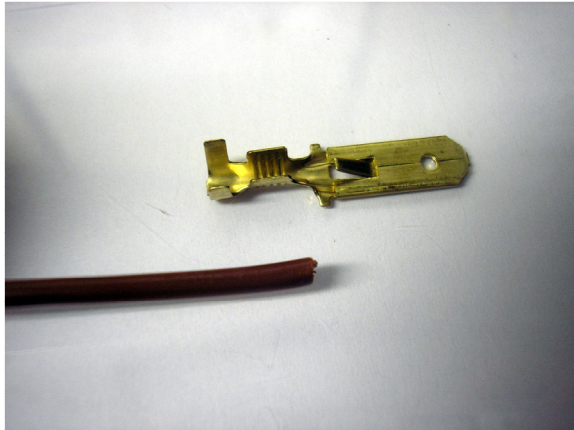

Terminal and wire



Strip and twist the wire to suit the terminal.

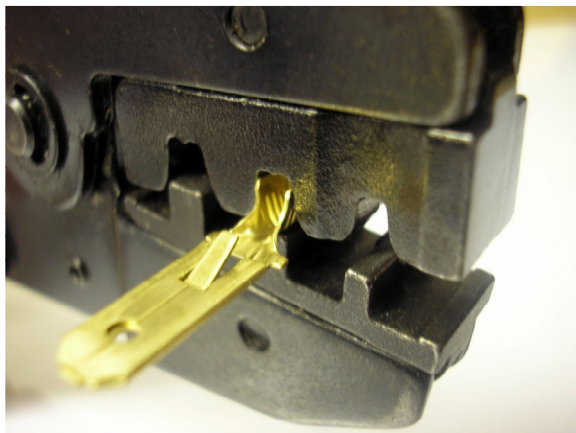

Place terminal in crimp tool.



Crimp Section should line up with front jaw of crimp tool.



Insert wire into crimp terminal.



The finished terminal.