



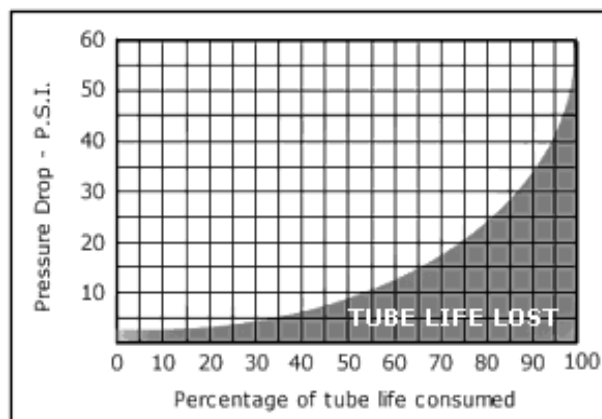

## General Notes:

Metal cores extend beyond the temperature limitations of the fibres. The temperature of the fluid to be filtered is very important with respect to compatibility and it is advisable to carry out proving tests on the cartridges with the liquid to be filtered if it is to be used at elevated temperatures.

It is advisable to select cartridges for the lowest possible initial pressure drop in order to maximize the useful life of the filter, 2 psi (0.14 bar) being the norm.

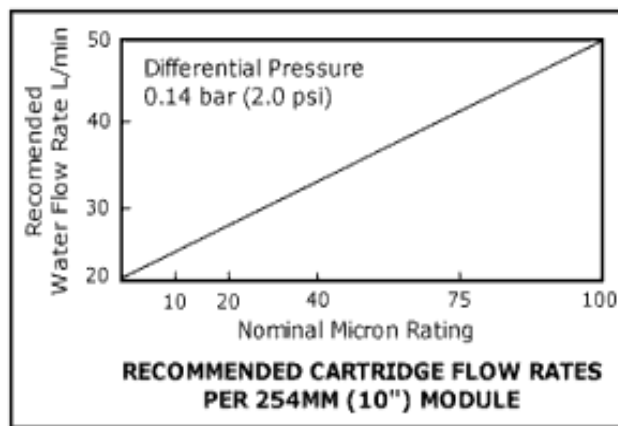

If a filter is selected for a pressure drop of 5 psi (0.35 bar) it can be seen that 35% of the life of the filter will be lost.

**Phoenix Filters**

15 Craven Street, Rossendale, Lancashire, BB4 8SW Tel: 01706 830511 Fax: 01706 600397  
Mobile 07812 339724 Vat Reg: 798 0184 88 e-mail [steve@airfilters.fsbusiness.co.uk](mailto:steve@airfilters.fsbusiness.co.uk)